

MC-FastTape



When speed is of the essence

You may think a mineral coving is essential when applying a waterproofing layer. Well, we have a quicker solution!

With MC-FastTape, you can now seal connecting joints (e.g. wall-to-floor connections) without any such time-consuming preparation. Prefabricated inner and outer corners mean no more cutting on site, ensuring a faster and more reliable result.

- **Fast and easy application**
- **Saves time, cuts cost**
- **Absolutely watertight**
- **No more chamfering of insulation boards**

EXPERTISE
WATERPROOFING

MC
BE SURE. BUILD SURE.

MC-FastTape



1 Clean the substrate. Fill pores and cavities > 5 mm with a suitable mortar.




2 Substrate needs prewetting to create a matt damp surface.



3 Apply scratch coat and allow to dry.



4 Apply first waterproofing layer.

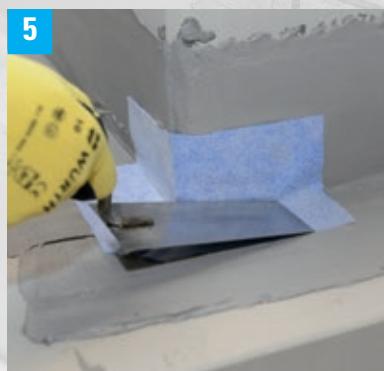

5 Embed MC-FastTape AE (outer corner) or MC-FastTape IE (inner corner) in the first fresh layer.



6 Apply MC-FastTape so that it overlaps at the inner or outer corner by at least 10 cm. Use the waterproofing compound as an adhesive for the connection.



7 Embed MC-FastTape and apply the last waterproofing layer.



8 Continue with fresh-in-fresh waterproofing of the remaining areas.

Form of delivery

MC-FastTape	Waterproofing Tape	in 50 m rolls
MC-FastTape IE	Inner Corners	in packs of 10
MC-FastTape AE	Outer Corners	in packs of 10

EXPERTISE
WATERPROOFING

MC-Bauchemie Müller GmbH & Co. KG · Am Kruppwald 1-8 · 46238 Bottrop, Germany · Tel. +49 2041 101-50
CI@mc-bauchemie.com · www.mc-bauchemie.com



BE SURE. BUILD SURE.